




# How to Use



## BEFORE CLEANING


- 1 Vacuum area thoroughly.
- 2 For the best results, pretreat spots, stains or heavily soiled areas by spraying with a pretreat or spot & stain remover.

## PREPARING THE MACHINE

- 1 Pull top tank handle up and lift to remove dirty water tank. 
- 2 Remove bottom clean water tank and fill with hot tap water to the WATER line.

- 3 Measure BISSELL full size machine formula using cap on tank. Fill cap to line twice for each full tank of water.
- 4 Screw cap back on and set tank back on base of machine.
- 5 Replace dirty water tank on top and push handle back to lock into place.

## CARPET CLEANING

- 1 Plug into a proper outlet and turn power switch to ON (I).
- 2 Release handle by pushing lower green handle release while pulling handle back. 
- 3 While pressing the red spray trigger, make one slow forward wet cleaning pass and another back.

Note: For best results, overlap the edges of your cleaning passes by 3-4".


- 4 Release the red trigger and go over area again with a slow forward and back pass to remove dirty water and aid in drying. 
- 5 Repeat wet cleaning passes (with trigger pressed) as needed until water being pulled up appears clean.

- 6 Continue drying passes (without trigger pressed) until you can't see any more water being pulled up.

Note: While cleaning, watch the flow indicator, if it stops spinning, check the water tanks.

## UPHOLSTERY & STAIR CLEANING


- 1 Vacuum area thoroughly.
- 2 Test a small hidden area for colorfastness. If color is affected do not use. Clean upholstery only if there is a W or WS on the manufacturer's tag.
- 3 Prepare the machine by filling tank and formula as above.

- 4 To attach the accessory hose, first insert the small solution hose into the open hole above the tank and turn clockwise to lock. Attach the larger hose to the top tank by lifting the green cap, inserting and turning clockwise until locked into place. 



- 5 Clean by pressing the red trigger to spray cleaning solution onto the area to be cleaned, then slowly move the tool back and forth to remove dirty water.

## EMPTYING THE MACHINE

- 1 Remove the dirty water tank by pulling the top handle up and lifting away from the machine. 
- 2 Remove the top of the dirty water tank by pulling the handle all the way forward to unlock, then lift tank to remove.
- 3 Pour dirty water out.

## PREPARING MACHINE TO RETURN TO THE STORE

To avoid cleaning fee, follow these steps:

- 1 Unplug the machine.
- 2 Remove and empty the dirty and clean water tanks. Rinse and let dry.
- 3 Wipe down the bottom of the machine to remove any hair or debris.
- 4 Rinse the accessory hose and tool (if rented and used).
- 5 Put tanks back onto machine and return machine and hose/tools to the store.



Thank you for selecting a BISSELL product

### FOR PRODUCT & INGREDIENTS QUESTIONS:

[www.BISSELLrental.com](http://www.BISSELLrental.com)  
[www.BISSELL.com/patents](http://www.BISSELL.com/patents)  
 1-800-749-9062

**Did you know?**  
 To save time you can download and complete the rental form at home.

1622152 Rev 10/19

READ ALL INSTRUCTIONS BEFORE USING THE BIG GREEN CLEANING MACHINE.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

### ⚠️ WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not immerse.
- Use only on surfaces moistened by cleaning process.
- Always connect to a properly grounded outlet.
- See grounding instructions.
- Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- Do not leave machine when it is plugged in.
- Do not service machine when it is plugged in.
- Do not use with damaged cord or plug.
- If appliance is not working as it should, has been dropped, damaged, left outdoors or dropped into water, return it to the store.
- Use indoors only.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces.
- Do not handle plug or appliance with wet hands.
- Do not unplug by pulling on the cord.
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot or burning objects.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, gasoline, etc.).
- Do not modify the 3-prong grounded plug.
- Do not allow to be used as a toy.
- Do not use for any purpose other than those described in this brochure.
- To unplug, grasp the plug, not the cord.
- Use only manufacturer's recommended attachments.
- Always install float before any wet pick up operation.
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage.
- Keep openings free of dust, lint, hair, etc.
- Do not point attachment nozzle at people or animals.
- Keep appliance on a level surface.
- Do not use without intake screen filter in place.
- Turn off all controls before unplugging.
- Be extra careful when cleaning stairs.
- Close attention is necessary when used by or near children.

## SAVE THESE INSTRUCTIONS.

THIS MODEL IS FOR COMMERCIAL USE.

### GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.



### ⚠️ WARNING:

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. DO NOT MODIFY THE PLUG. If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the drawing above. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.